Install guide for Kinman Tele pickups (**2C**) in Fender S1 system.


For Kinman Tele neck pickups with 2 conductor cable (Red inner + Shield)
For 3 conductor cable (Red & Blue inner + Shield) use "Install guide for Kinman Tele pickups (**3C**) in Fender S1 system"

Step 1: Sketch the original wiring from the pickups onto page 2 before disconnecting it.

Step 2: De-solder original pickups from S1 Harness. Note: some may have 3 wires.

Step 3: Install the new pickups and solder wires as shown in the diagram.

Note: the original existing wiring should appear exactly as it does in the diagram.

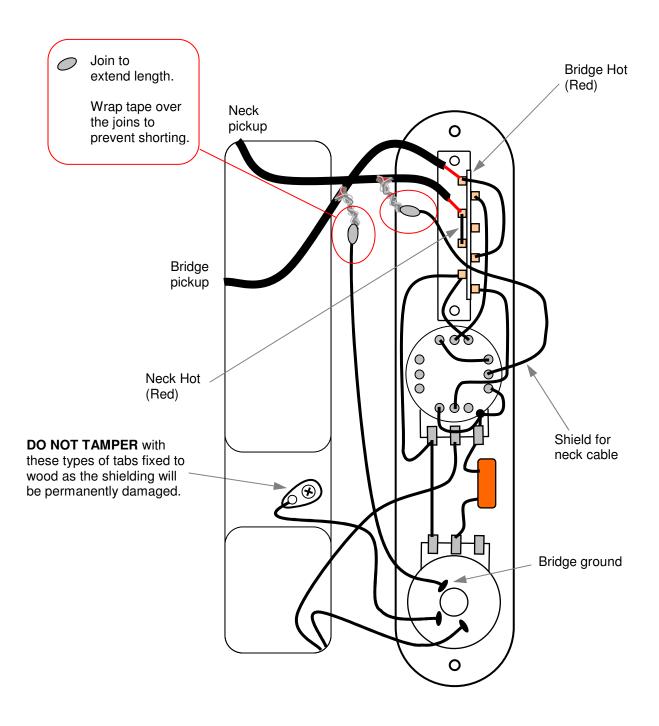

For your convenience: Sketch the original wiring from the pickups onto this page before disconnecting it.

