
Install guide for Kinman Tele pickups (3C) in Fender S1 system. ^{23-Feb-08}

- Step 1. Sketch the original wiring from the pickups onto page 2 before disconnecting it.
- Step 2. De-solder original pickups from S1 Harness. Note: some may have 3 wires.
- Step 3. Install the new pickups and solder wires as shown in the diagram.

Note: the original existing wiring should appear exactly as it does in the diagram.

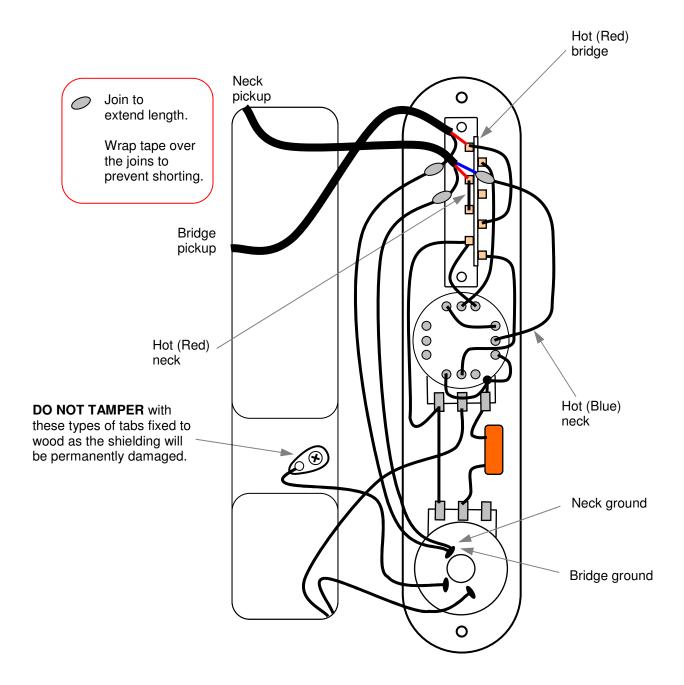

For your convenience: Sketch the original wiring from the pickups onto this page before disconnecting it.

